KORG KORG Module MOBILE SOUND MODULE

Owner's Manual

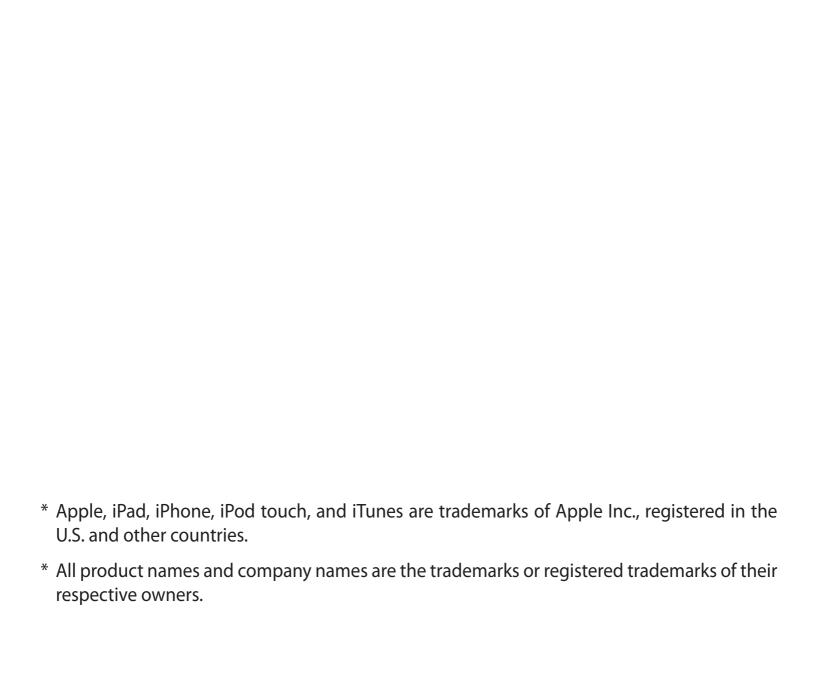


Table of Contents

Introduction	6	
Main features	7	
Getting Ready	8	
Selecting and playing a Program	10	
Selecting a Program	11	
Playing the Program	13	
Editing and Saving a Program	17	
Editing Program Parameters	17	
Editing Effect Parameters	18	
Saving an Edited Program	19	
Adding and Playing MIDI Files	21	
Adding a MIDI file from your computer	21	
Selecting and Playing a MIDI File	22	
Recording your performance	24	

Using the Set List Feature	27
Creating a Set List	28
Adding Programs to the Set List	31
Adding Notes or Comments	
Using the Score Viewer	38
Playing a Program from the Set List	42
Creating a Song List	
Playing Songs from a List	46
Editing a List	
Module	52
Header	52
A.Piano	54
E.Piano	56
Organ	59
Clav	61
Multi	63
Effects	65
Set List Screen	75
1. Header	

2. Set list name	77
3. List	77
4. Program Level	78
5. Text	78
6. Score viewer	79
7. Music player	80
Module Performance Expansion	82
Using Split / Layer	83
Layer/Split parameters	
Using MIDI CC# Learn function	85
Parameters that can be controlled via MIDI	86
Operating Requirements	88
Specifications (Pro version)	89
Support and Service	91
Information to Provide When Contacting Us	91
Before You Contact Us	

Introduction

Congratulations, and thanks for choosing KORG Module. To fully enjoy your purchase, please read this manual carefully and retain it for future reference, and use this product only as directed.

Maintaining its position at the forefront of mobile music apps, KORG now offers you a new style of performance and production with Korg Module. Ideal for performance and music production, KORG Module is a high-quality sound module app for iPhone/iPad that contains a huge sound library. If you have an external MIDI keyboard and an iPad/iPhone, you can play studio-quality keyboard and grand piano sounds anywhere. You can also use the sounds of KORG Module for the KORG Gadget music production app.

The pro version comes with 5 internal sound engines and a total of 100 sounds created with those engines. The free version is initially limited to the "Natural Grand" sound, but further sounds and engines can be unlocked via Korg controllers/synthesizers or the store page.



Main features

- High-quality acoustic piano sound, "Natural Grand".
- Welcome to a new mobile world, where your iPad/iPhone and a MIDI keyboard is all you need for a complete setup
- Integrating iOS technology that's indispensable for the mobile environment
- Five dedicated sound engines containing 100 powerful sounds*
- Convenient Set List function with a PDF/image score viewer and music player*
- Easily record your performances, and share song sketches on SoundCloud*
- Mobile music production in tandem with KORG Gadget*

Tip: * items are available in Pro version only. However you can unlock these features. Go to https://support.korguser.net/hc/articles/360030601932 for more information.

Getting Ready

- 1. First, connect a MIDI keyboard or other controller to your iPad/iPhone.
- **2.** Tap the icon on the Home screen of your iPad/iPhone to launch the app. When you first start the Korg Module app, the Module screen will appear.



This screen should display an instrument such as a piano or electric piano. If it does not, simply touch the word "Module" in the upper right of the screen. From this screen you can select and play a sound.

- 3. Make sure that your iPad/iPhone is set to play audio, and that the volume is set to a suitable level.
- 4. Now that the Korg Module app is running, play a few notes on the MIDI keyboard that's connected to the iPad/iPhone, or use the on-screen keyboard. If you hear sound, your Korg Module is ready to use.

Tip: Use headphones, self-powered speakers, or an amplifier and speaker system to enjoy higher quality sound.

Selecting and playing a Program

Your Korg Module app comes with these five internal sound engines:

Acoustic Piano	Electric Piano	Organ	Clav	Multi
----------------	----------------	-------	------	-------

Only the Acoustic Piano is available in the free version. The pro version comes with all five engines and an accompanying set of 100 sounds.

All programs are conveniently organized into 12 categories for easy access:

Acoustic Piano	Electric Piano	Organ	Clav	Strings/Choir	Brass/Wind
Synth	Bell/Mallet	Guitar/Plucked	Bass	Others	User

Key parameters of each sound can be adjusted to suit your taste. Even with programs created using the same sound engine, adjusting the parameters can produce a wide range of variation.

Selecting a Program

1. Tap the Category name and Program name shown in the Module screen to access the Program Browser.



In the Program Browser, the program categories appear in the left-hand columns, and the available programs in that category appear in the right-hand columns.



2. Choose a Category.

3. Select a Program

The selected program is now active. The module that appears will depend on the selected program. In order to audition the Program, simply tap one of the three "Phrase" buttons to play a musical loop or phrase using the selected sound.



4. Once you have selected a program, simply tap outside the list.

Playing the Program

Now you can play the selected program using an attached MIDI keyboard, or by tapping the onscreen keyboard. You can also enhance your performance by changing the Octave range, choosing a Velocity Curve, editing the Program parameters, and modifying the Master Effect settings. Any changes you make to the Program can be saved to the User Bank for the future.

Tip: The procedure for saving a Program begins on page 19.

Changing the Octave Setting

The pitch range of the keyboard can be changed, in one-octave steps.


1. Use the ◀ and ▶ buttons at the left of each module's keyboard to shift the pitch range Up or Down in one-octave steps



Choosing a Velocity Curve

The Velocity Curve determines how the volume and the tone of a Program will change based on how strongly individual notes are played using a connected MIDI controller. By adjusting the Velocity Curve, you can customize the response of Korg Module to match your own playing style

1. In the upper left of the screen, tap the icon to open the Velocity Curve edit screen.

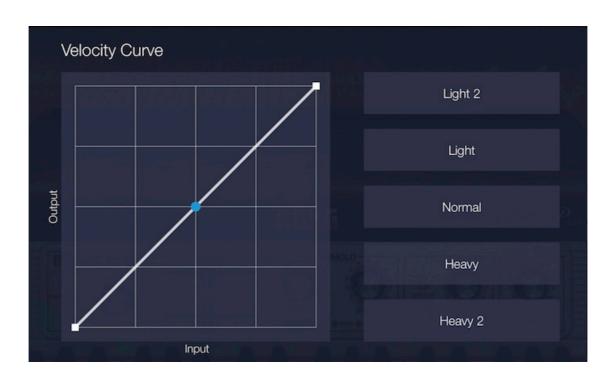

2. Use the buttons on the right side of the screen to select a velocity curve.

Soft, Soft2: If you play with a soft touch, these curves will allow you to increase your dynamic range, allowing you to achieve higher dynamic levels without having to play the keyboard forcefully. Soft 2 provides greater change in dynamic levels.

Normal: This is the standard velocity curve setting

Hard, Hard2: If you play with a heavy touch, these curves will allow you to increase your dynamic range, allowing increased expression to play softer passages than your playing would normally allow. Hard 2 provides greater change in dynamic levels.

Tip: You can also create your own velocity curve by moving the colored dot on screen.

3. When you've finished, simply tap outside the edit screen.

Editing and Saving a Program

Editing Program Parameters

The knobs and buttons that appear on the front panel are available to edit the sound of the program. For example, you can use the Variation + / – buttons to change the basic character of the sound.



In addition, the various knobs, sliders, buttons, and switches can be used to edit the major parameters of each sound.



Tip: The complete list of the available parameters for each sound engine, or Module, begins on page 52.

Editing Effect Parameters

Each Program is equipped with two Master Effects. One is a Modulation Effect; the second is an Ambient Effect. Each effect provides an effect type, plus two editable parameters.



Tip: The complete list of the available parameters for each Effect begins on page 65.

Tip: To save your edits, follow the Saving an Edited Program procedure starting on the next page.


Saving an Edited Program

If you want to keep the sound and effect settings that you have edited, you can save them as a User Program.

- 1. Tap the Category name and Program name shown in the screen.
- 2. Select "User" as the Category, and then tap the "Save Program..." option.



3. Use the on-screen keyboard that appears to give your edited Program a new name. When you've finished entering the name, tap the putton.

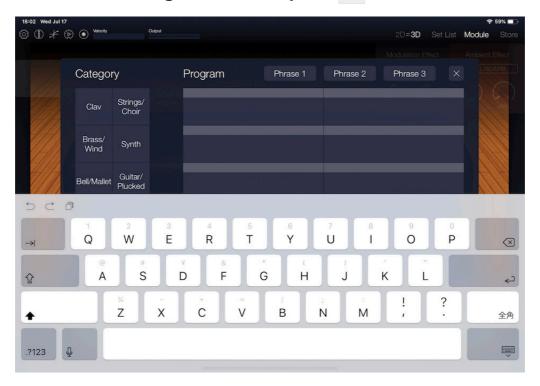

Your edited Program is now saved.

Note: You cannot overwrite a Preset Program.

Adding and Playing MIDI Files

Korg Module contains a MIDI player that is capable of playing Standard MIDI Files. In order to play a MIDI file, you must first add the file to your iPad/iPhone.

Note: This feature is only available by default in the pro version, but can be unlocked in the free version as well.

Adding a MIDI file from your computer

- 1. Connect the iPad/iPhone to your computer.
- 2. Start iTunes.
- 3. On the left side of the upper tabs in iTunes, choose iOS device icon.
- 4. In the list on the left side, choose "File Sharing."
- **5.** Scroll down, and choose "Module" from the apps below "File Sharing". Below the "Module Documents" shown on the right side, click [Add file].
- **6.** Select the MIDI file that you want to play, adding it to the iPad/iPhone.
- 7. Disconnect the iPad/iPhone from your computer, and close iTunes.


Selecting and Playing a MIDI File

Here's how to use the MIDI player to play a MIDI file that you've added to the iPad/iPhone.

1. Tap the picon in the upper left side of the screen to access the MIDI player.



2. Tap "Tap to Select File," and select the MIDI data from the list that appears.

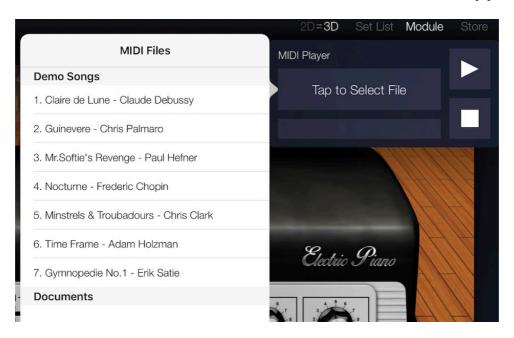

- 3. Tap the [Start] button to play the MIDI data.
- 4. Tap the [Stop] button to stop playback.
- **5.** To close the MIDI player, tap outside the player.

Recording your performance

KORG Module provides a recorder that you can use to record your practicing or to sketch ideas for songs. The audio data you record can be uploaded directly to the SoundCloud music sharing site, or you can share your performance with your friends via other sharing options.

Note: This feature is only available by default in the pro version, but can be unlocked in the free version as well.

1. Tap the icon in the upper left of the screen to access the recorder.



- 2. In the center of the recorder screen, tap Recording starts.
- 3. Perform.
- **4.** When you've finished performing, tap . The recording completion screen will appear.



If you want to retry the recording, tap "Back." You will return to the recording screen.

- **5.** If you want to save the recorded data, tap "Save." The data will be saved, and the share screen will appear.
- 6. Choose the sharing destination. If you don't want to share your recording, tap "Close."



Using the Set List Feature

One of the most innovative Korg Module features is the Set List. The Set List allows you to create a collection of your favorite songs and programs in a single list for convenient access. Using the Set List, you can:


- Create a list containing all of the programs that you use for a live performance, and select them quickly during performance.
- Display a photo or a PDF image on the screen—including a musical score or lyrics.
- Use the built-in music player to play your favorite songs from a list that you've created. The songs
 can play back in sync with the music, so you can play songs as you perform. You can also adjust
 the speed of the playback making it easier to learn new songs.

Note: This feature is only available by default in the pro version, but can be unlocked in the free version as well.


Creating a Set List

Here's how to register programs and songs in a set list. First you'll need to access the Set List screen.


1. In the upper right corner of the screen, tap "Set List" to access the Set List screen. The right side of the screen displays the titles of the existing set lists. The left side of the screen displays—from top to bottom—the title of the selected set list, a volume slider, a score viewer for PDFs or images, and a music player denoted by the "Tap here to import a song" label.

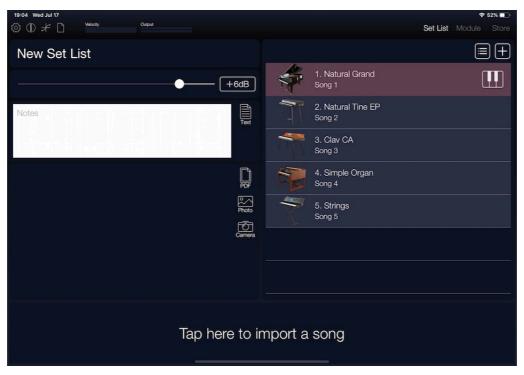

2. In the upper left, tap the icon; in the file menu that appears, choose "New."

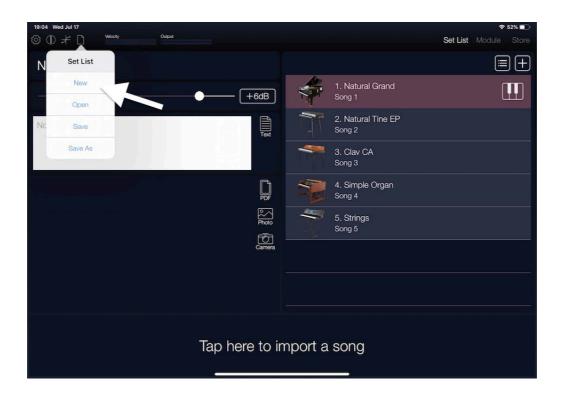


3. In the dialog box that appears, use the on-screen keyboard to assign a title to the set list, then tap "OK." For this example, use the name "New Set List."

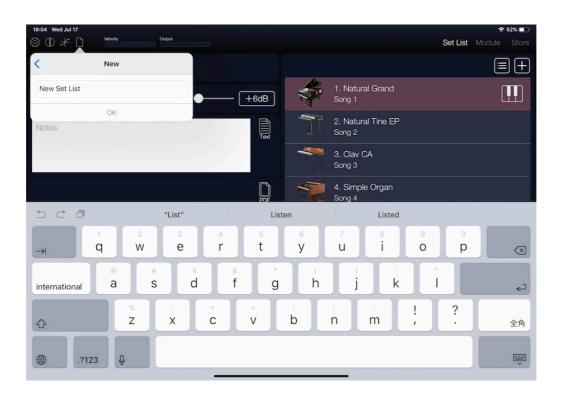


Adding Programs to the Set List


1. Tap the III button that's at the right edge of the list to open the Program Browser.

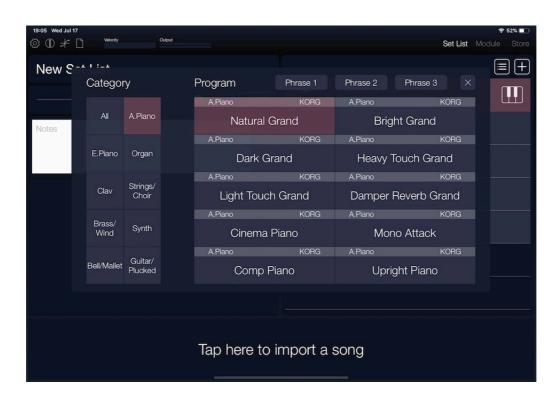


2. From the Program Browser, select the program that you want to add to the Set List. The list shows the program name and icon.

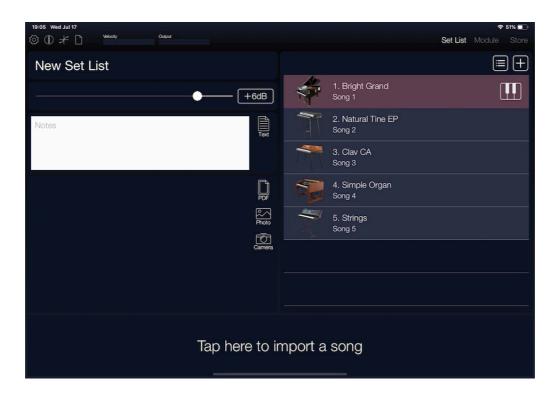


3. Tap the button at the upper right of the list. A row will be added, and "Natural Grand" is now registered to the Set List.

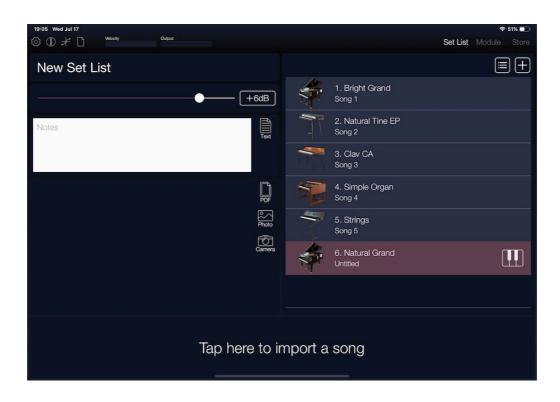

4. Repeat the previous steps to open the Program Browser and add additional Programs to the Set List.

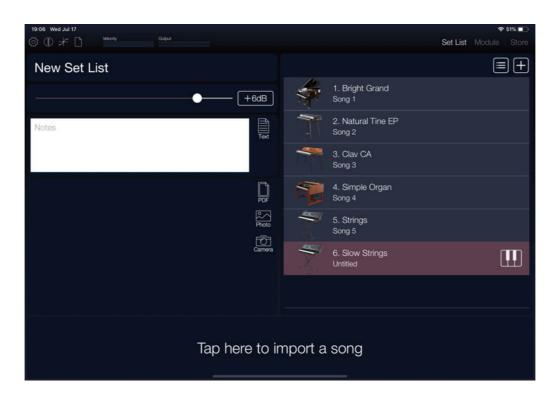


5. Tap the icon to open the file menu, and choose "Save" to save your Set List.

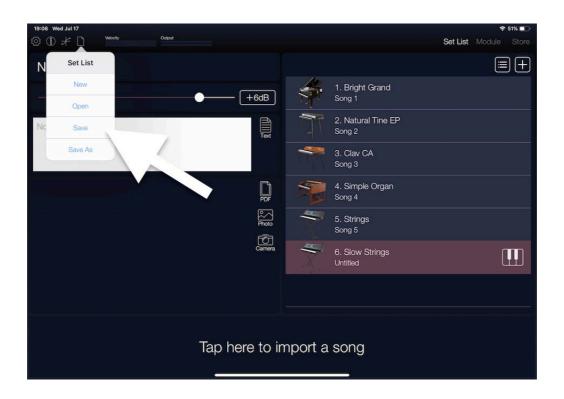


Adding Notes or Comments

By adding performance notes or comments to the Set List, you can keep track of any important performance information, such as "Sing harmony on Verse 3," "Wait for Drum Solo after Chorus," or "Introduce the band now," etc.

- 1. From the Set List, select a registered Program or Song.
- 2. Tap the white space to the left of the list.

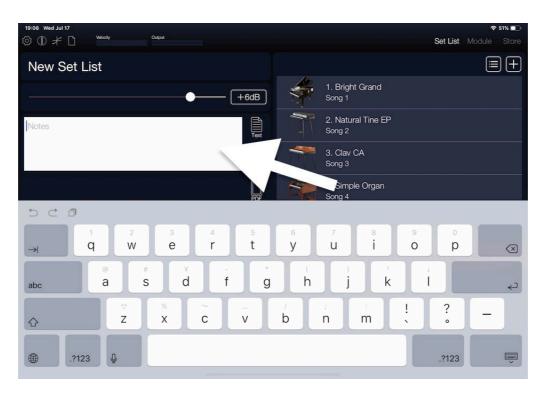

3. Use the on-screen keyboard that appears to enter your comment(s). When you've finished, tap the button.

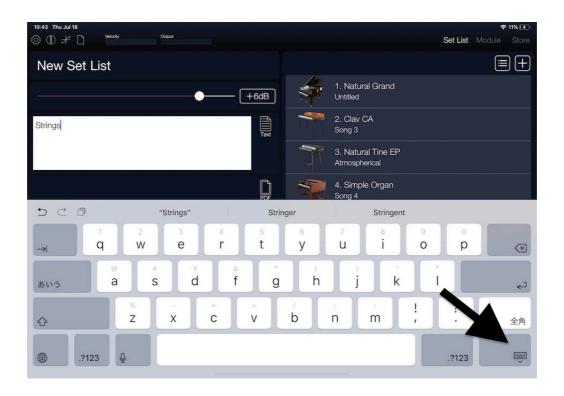

Using the Score Viewer


With the Score Viewer, it's possible to use Korg Module to display PDFs or image data (such as musical scores) that you have saved to your iPad/iPhone.

Adding a PDF file from your computer


- 1. Connect the iPad/iPhone to your computer.
- 2. Start iTunes.
- 3. Go to iOS device menu via the device icon in the top left corner of iTunes.
- 4. Choose "File Sharing" from the list on the left.
- **5.** Scroll down, and choose "Module" from the apps below "File Sharing". Below the "Module Documents" shown on the right side, click [Add file].
- **6.** Select the PDF file that you want to display, adding it to the iPad/iPhone.
- 7. Disconnect the iPad/iPhone from your computer, and close iTunes.

Displaying a PDF file in the Score viewer


- 1. From the Set List, tap the button to access the Score Viewer.
- 2. When the dialog box appears, select the file that you want to be displayed in the Score Viewer.

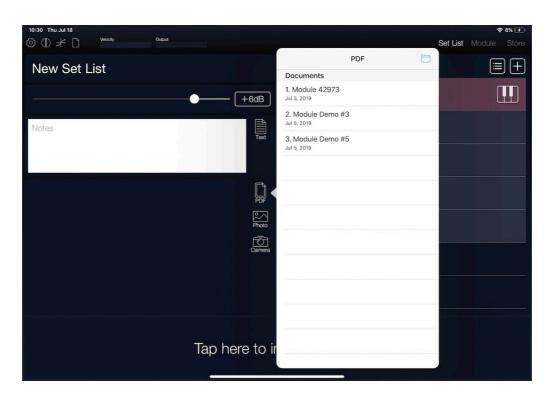

3. The selected file will appear in the Score Viewer.

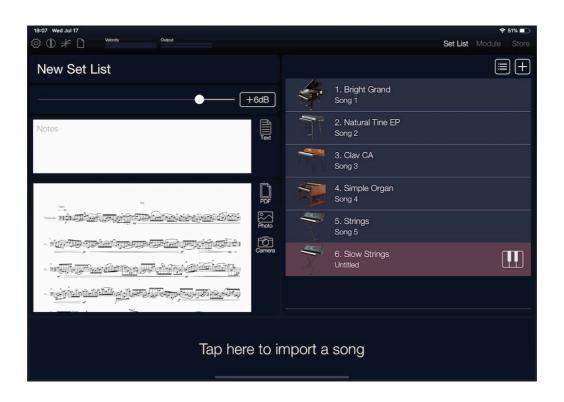

4. Tap the displayed score to enter full-screen mode.

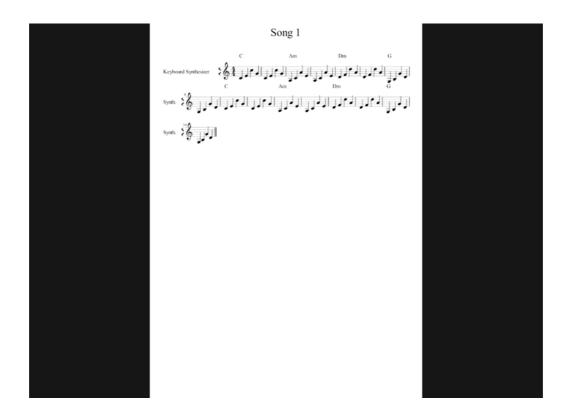


Tip: If the displayed file consists of multiple pages, you can turn pages directly from the full-screen display.

Tip: In full-screen display, you can swipe to zoom a PDF or photo.

Playing a Program from the Set List

1. To select a program from the list, simply tap the program name shown in the list.

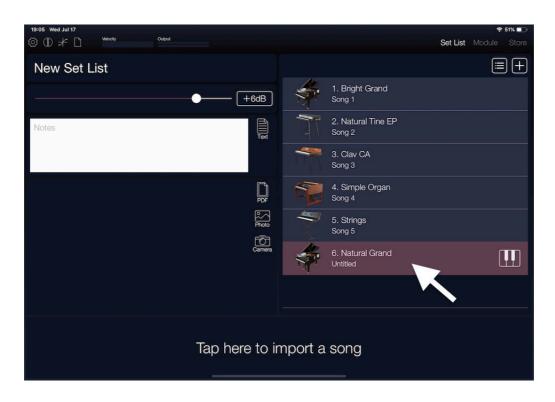


2. You can now play the selected Program using the external MIDI keyboard that's connected to the iPad/iPhone.

Creating a Song List

- 1. In the upper left, tap the icon; in the file menu that appears, choose "New."
- 2. In the dialog box that appears; use the on-screen keyboard to assign a title to the set list, and then tap "OK." For this example, use the name "New Set List."
- 3. At the bottom of the screen, tap "Tap here to import song."




4. Select the song you wish to add to New Set List from the list of available songs that will appear.

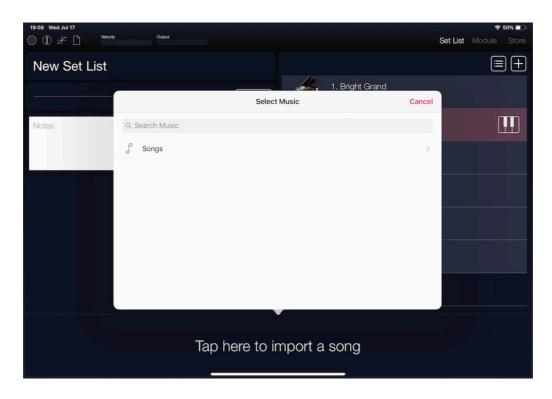

5. The selected song is now registered to the first location in the Song List. In place of the "Tap here to import song" prompt, the Korg Module song player control panel will appear.


6. Tap the button at the right edge of the screen to open the Program Browser.

By selecting a program, you will be able to play Korg Module from an attached MIDI keyboard controller using the selected sound while the Song is playing.

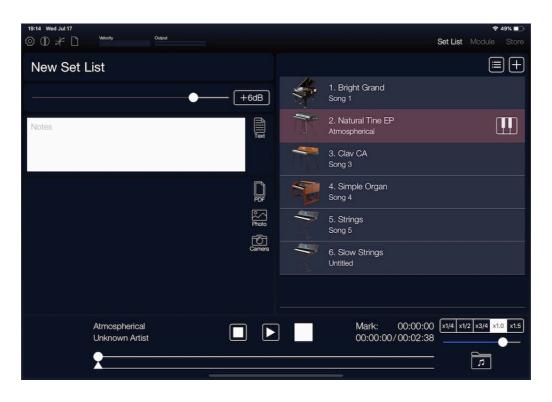

7. Tap the icon to open the File menu, and choose "Save" to save your Song List.

Playing Songs from a List

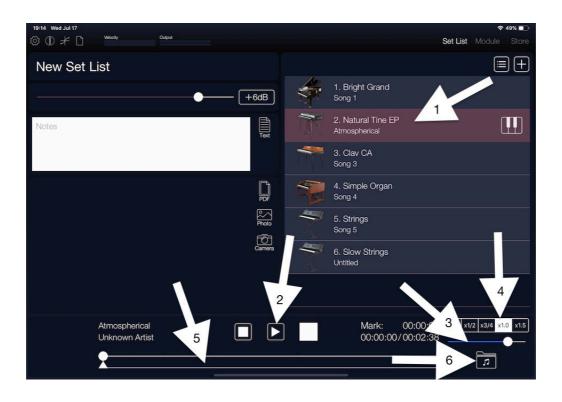

- 1. From the list, select the song that you want to play.
- 2. In the Korg Module music player, tap the button to play the selected song.

 As the song is playing, you can perform using the selected program using an external MIDI keyboard/controller that's connected to the iPad/iPhone.

- 3. This slider located to the right edge will control the playback volume.
- 4. These buttons will change the playback speed of the song.
- 5. The sliders at the bottom edge of the music player indicate the playback progress, and below that is the Mark slider.


The Mark slider indicates the point in the song where playback will continue from each time the button is pressed.

6. The button will open the library, so you can re-select the registered song from the list.

Editing a List

In List Edit mode, you can delete items or change the order of items in a list.


1. Tap the E button located at the upper right of the list to enter the List Edit mode.

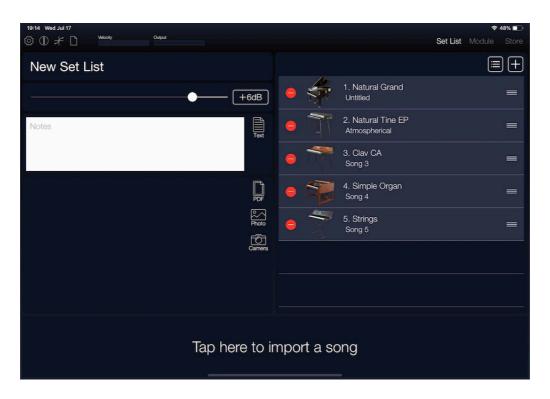


A button (Delete) and a button (Drag) will appear at opposite ends of each row in the list.

2. Moving an Item:

To change the order of an item in the list, touch the _____ button for that item, drag it to the new location, and then release your finger. For this example, take the first item on the list and drag it to the third position.

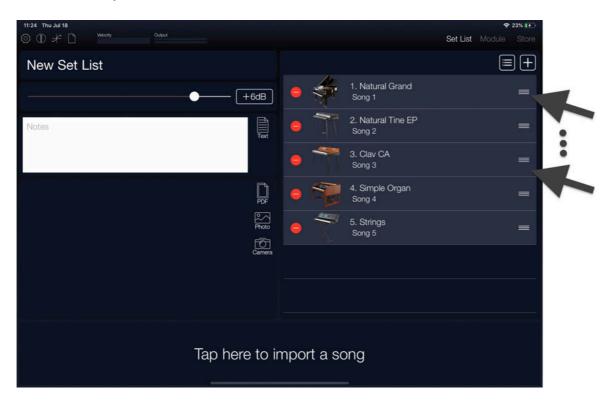


The first item on the list has been moved to the third position.

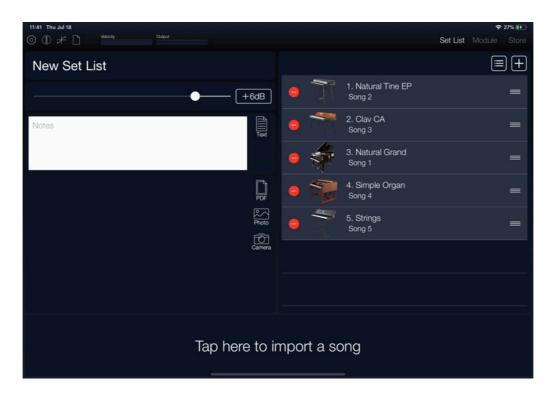

3. Deleting an Item:

For this example, remove the second item on the list, Program 2. Clav CA, by tapping the button for row 2. A button will appear at the right edge of the row.



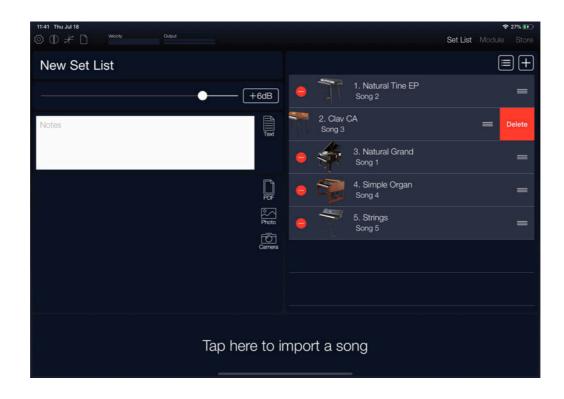

4. Tap this button to confirm that you want to delete this item.

The item will be deleted from the list.

Note: If there is only one item in a list, it cannot be deleted.

Module

Module is the main screen, where you select and play programs.

Your Korg Module comes with the five internal sound engines:

• Acoustic Piano • Electric Piano • Clav • Organ • Multi

Each module provides several parameters that let you adjust the sound. You can use the preset programs without change, or modify their sound to your taste.

Header

These are the items that appear in the header bar:





(Settings): Here you can control settings such as Bluetooth MIDI, Stereo/Mono operation, etc.



(INFO): Displays a help screen that shows the version of the app and provides information about using it.

Tips: Displays operating hints on the screen.

Manual: Displays the user's manual.

FAQ: Displays the "Korg App Help Center."

Note: In order to view the user's manual or the "Korg App Help Center," you must be able to

connect to the Internet.

(VELOCITY CURVE): This item opens the screen where you can choose a velocity curve to match your playing style.

See page 15 "Choosing a Velocity Curve."



(MIDI PLAYER): Tapping this item (while the module screen is visible) will open the MIDI Player.

See page 21 "Adding and Playing MIDI Files."

Velocity: This bar-graph meter displays the velocity values as you perform.

Output: This stereo meter displays the volume while you perform.

Set List: Tapping this item will open the Set List screen.

See page 75 "Set List Screen."

Module: Displays the module screen.

Store: Tap on this item to enter a screen where you can purchase additional sound engines for the Korg Module.

Note: In order to view the screen for purchasing additional sound engines, you must be able to connect to the Internet.

2D/3D: This item changes the 2 graphic mode of modules.

A.Piano

This is a premium acoustic piano module that features un-looped data carefully sampled from world renowned acoustic pianos. If you're using an external MIDI keyboard, your playing dynamics will shift between various levels of sampled data, responding to your touch and expressing your sound with a rich dynamic range. The sympathetic resonance of the open strings when the damper pedal is pressed has also been reproduced. Sounds such as upright piano and electric grand piano as well as other variations that add layered strings or pads are also provided, allowing a wide variety of high-quality sounds.



Octave

These buttons shift the pitch range in steps of \pm one octave.

Variation

Here you can select the acoustic piano variations.

Equalizer - Low

Adjusts the level of the low-frequency range of the sound.

Equalizer - Mid

Adjusts the level of the mid-frequency range of the sound.

Equalizer - High

Adjusts the level of the high-frequency range of the sound.

Release Time

Adjusts the release time of the sound.

Damper / Layer Level

Adjusts how the sound resonates when you press the damper pedal, and adjusts the volume of the layered sound.

Output Level

Adjusts the volume level.

E.Piano

This is an electric piano module that realistically reproduces the distinctive tones of a sweet-sounding vintage electric piano. Since multiple levels of velocity layers are provided, the sound is extremely realistic throughout the full dynamic range of soft to strong notes. This module also provides the EQ and tremolo, as well as a drive circuit that's ideal for producing funkytones. You'll never tire of immersing yourself in the sweet sounds of this module.



OCTAVE

These buttons shift the pitch range in steps of \pm one octave.

VARIATION

Here you can select the electric piano variations.

KEYOFF NOISE

Adds authentic key noise when the note is released.

RELEASE TIME

Adjusts the release time of the sound.

HIGH

Adjusts the level of the high-frequency range of the sound.

LOW

Adjusts the level of the low-frequency range of the sound.

TREMOLO switch

Specifies the tremolo effect.

OFF: Tremolo off

MONO: Tremolo on, monaural

STEREO: Tremolo on, stereo

TREMOLO - DEPTH

Adjusts the depth of modulation when tremolo is on.

TREMOLO - SPEED

Adjusts the speed of modulation when tremolo is on.

AMP SWITCH

the amp simulation effect on/off.

DRIVE

Adjusts the amount of drive for the amp.

OUTPUT LEVEL

Adjusts the volume level.

Organ

This is a powerful organ model that samples a range of sound variations from a traditional vintage organ. With a powerful rotary speaker, vibrato and chorus that adds character to the sound, and an overdrive circuit that generates warm distortion, it's easy to produce realistic organ sounds.



OCTAVE

These buttons shift the pitch range in steps of \pm one octave.

ROTATION

Specifies the rotary effect.

STOP: Stops the rotation of the rotor.

SLOW: Slows the rotation of the rotor.

FAST: Speeds up the rotation of the rotor.

VIBRATO & CHORUS - ON/OFF

Switches the vibrato/chorus effect on/off.

VIBRATO & CHORUS - V-C

Selects a preset for the vibrato/chorus effect.

V-1, V-2, and V-3 are vibrato;

C-1, C-2, and C-3 are chorus.

OVERDRIVE

Adjust the amount of overdrive distortion.

OUTPUT LEVEL

Adjusts the volume level.

VARIATION

Here you can select the variation of organ.

Clav

This is a clav module that reproduces the sharp attack and percussive sound of a classic instrument. Since the pickup and filter can be controlled by individual switches, you can easily try out different changes in the sound. Additional parameters indispensable to the clav sound have been carefully selected, such as a mute slider that adjusts to the sound.



OCTAVE

These buttons shift the pitch range in steps of \pm one octave.

FILTER - PRESENCE

Sets the tonal character of the high-frequency range.

FILTER - TREBLE

Sets the high-frequency range of the sound.

FILTER - MEDIUM

Sets the mid-frequency range of the sound.

FILTER - BASS

Sets the low-frequency range of the sound.

Note: If all of these are OFF, no sound is output.

PICKUP - C/D Switch, A/B Switch

A variety of sounds can be produced by using different pickup (and filter) combinations.

OUTPUT LEVEL

Adjusts the volume level.

KEYOFF NOISE

Adjusts the amount of authentic key noise added when the note is released.

MUTE

Adjust the amount of muting.

Multi

The multi module lets you produce a wide range of sounds including strings, brass, and synth. It provides acrisp, high-quality sound, with each tone displaying a set of the most suitable parameters for editing, so you can easily and efficiently attain the sound you desire.



OCTAVE

These buttons shift the pitch range in steps of \pm one octave.

WAVE VARIATIONS

In this screen, you can choose from the available waveforms.

CHARACTER

These four knobs provide control of additional sound parameters. The actual parameter being controlled will appear in the "scribble-strips" above each knob.

Tip: The character parameters will differ depending on the waveform that's selected in WAVE VARIATIONS.

AMPLIFIER - Attack Time

Adjusts the attack time of the EG (envelope generator).

AMPLIFIER - Release Time

Adjusts the release time of the EG.


AMPLIFIER - Output Level

Adjusts the volume level.

Effects

Korg Module contains two effect processors to enhance the sound quality and to provide an additional dimension to your sonic creations;

the Modulation Effect (Mod) and the Ambient Effect. The Modulation Effect provides 22 types of Dynamic, Filter, and Motion-style effects. The Ambient Effect offers 7 Delay and Reverb-type effects. For each effect there are two editable parameters.

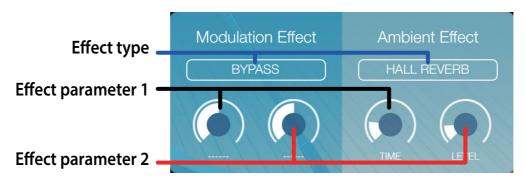

Effect type

Selects the effect type.

Effect parameters 1, 2

Here you can adjust the parameters of the effect selected in effect type. The editable parameters differ depending on the effect chosen.

For details on the available effect types and their effect parameters, refer to page 66 "Effect parameters."

Effect parameters

Modulation effects

COMPRESSOR

This effect compresses the level of the input signal to provide more consistency and punch. It is also an effective way to emphasize the sense of attack.

SENS: Adjusts the sensitivity of the compressor. Raising this value will boost low-level sounds.

LEVEL: Adjusts the output level.

2BAND EQ

This is a shelving-type equalizer. It boosts or cuts the level of the low and high frequency ranges.

LOW GAIN: Adjusts the low frequency range.

HIGH GAIN: Adjusts the high frequency range.

PEAKING EQ

This boosts or cuts the level of the frequency range that you specify.

FREQ: Specifies the center of the frequency range that will be boosted or cut.

GAIN: Adjusts the gain. When the knob is in the center, the response is flat. At the maximum and minimum positions, the level will be boosted or cut by \pm 15 dB.

LOWPASS FILTER

This is a filter that allows only the low-frequency sound to pass, making the sound darker and more mellow.

CUTOFF: Adjusts the cutoff frequency.

RESONANCE: Boosts the region near the cutoff frequency, adding a distinctive character to the sound.

HIGHPASS FILTER

This is a filter that allows only the high-frequency sound to pass, making the sound harder and brighter.

CUTOFF: Adjusts the cutoff frequency.

RESONANCE: Boosts the region near the cutoff frequency, adding a distinctive character to the sound.

BANDPASS FILTER

This is a filter that cuts all but the frequency range you specify, allowing you to emphasize just a portion of the sound.

CUTOFF: Adjusts the cutoff frequency.

RESONANCE: Boosts the region near the cutoff frequency, adding a distinctive character to the sound.

AUTO WAH

Automatically applies a wah effect that follows the strength of the input sound.

SENS: Sets a threshold level for the auto wah effect.

FREQUENCY: Specifies the center frequency of the wah.

TAKING MOD

This effect adds vowel formants to the input sound, producing the impression of a human voice.

FORMANT: Adjusts the formant. Turning the knob clockwise will smoothly change the formant through the range of [a]-[e]-[o]-[u]-[i].

OFFSET: Specifies the pitch of the formant frequency.

DECIMATOR

This lowers the sample rate and bit depth to intentionally simulate the rough sound of an inexpensive sampler.

FREQ: Adjusts the tonal character. Increasing this value will lower the sample rate, making the sound more "lo-fi."

BALANCE: Adjusts the balance of the effect sound and direct sound.

DRIVE

This effect drives the input signal, boosting it to create natural distortion.

GAIN: Adjusts the amount of distortion by adjusting the input level of the distortion circuit.

LEVEL: Adjusts the output level.

DISTORTION

This distortion effect creates hard distortion.

GAIN: Adjusts the amount of distortion by adjusting the input level of the distortion circuit.

LEVEL: Adjusts the output level.

TUBE DRIVE

This effect simulates the soft distortion and fatness that are characteristic of a vacuum tube amp circuit.

TUBE GAIN: Adjusts the amount of distortion and fatness.

LEVEL: Adjusts the output level.

FLANGER

Flanger adds spaciousness and a sense of vibrato by mixing the original sound with a pitch-modulated sound. Compared with Polysix Chorus/Phase, it produces an effect with more of an edge.

SPEED: This controls the speed of the flanger' LFO.

DEPTH: This sets the depth of LFO modulation.

EP CHORUS

This effect is inspired by a rare chorus that was built into an early version of a famous modified electric tine piano.

SPEED: This controls the speed of the chorus' LFO.

DEPTH: This sets the depth of LFO modulation.

POLYSIX CHORUS

This effect reproduces the chorus effect that was built into the original Korg Polysix. It adds modulation, spaciousness, and a sense of vibrato to the sound by mixing the original sound with a pitch-modulated sound.

SPEED: Adjusts the speed at which the pitch is modulated.

SPREAD: Adjusts the left/right spaciousness.

POLYSIX PHASER

This effect reproduces the phase effect that was built into the original Korg Polysix. It adds modulation, spaciousness, and a sense of vibrato to the sound by mixing the original sound with a pitch-modulated sound. You can obtain a distinctive sense of transparency by combining this with Polysix Chorus in different ways.

SPEED: Adjusts the speed at which the pitch is modulated.

SPREAD: Adjusts the left/right spaciousness.

POLYSIX ENSEMBLE

This effect reproduces the ensemble effect that was built into the original Korg Polysix. It adds a deep sense of chorus by mixing multiple copies of pitch-modulated sound.

SPREAD: Adjusts the left/right spaciousness.

DEPTH: This sets the depth of effect.

SMALL PHASER

This classic phaser, made in New York City during the 70s, has a notably warm and rich tone with liquid transparency.

SPREAD: Adjusts the left/right spaciousness.

COLOR: This adjusts the strength of the effect.

ORANGE PHASER

This phaser pedal is a favorite on many recordings. It's useful for adding sparkle, animating chord passages, and widening and fattening the sound.

SPEED: This controls the speed of the phaser's LFO.

COLOR: This adjusts the strength of the effect.

TREMOLO

This effect modulates the of the level of input signal. It produces a pulsating or wavering effect.

FREQ: This controls the tremolo speed.

DEPTH: Adjusts the depth of the effect.

AUTO PAN

This effect modulates the left/right volume of the input signal. Increasing the Depth will produce a greater left/right spread.

FREQ: Adjusts the rate at which the left/right volume is modulated.

DEPTH: Adjusts the depth of the auto pan effect.

RING MOD

This modulates the sound to add a metallic resonance or give it a sound-effect-like character.

FREQ: Specifies the frequency at which modulation will be applied. Turning the knob clockwise will raise the frequency.

BALANCE: Adjusts the balance between the effect sound and direct sound.

Ambient effects

DELAY

This effect delays the sound. This is a cross feedback delay with a short delay time. It is not synchronized to the tempo.

TIME: Specifies the delay time.

DEPTH: Adjusts the delay depth and the amount of feedback.

PING PONG DELAY

This is a stereo delay which alternates the sound between left and right.

TIME: Specifies the delay time.

DEPTH: Adjusts the delay depth and the amount of feedback.

MOD DELAY

This delay lets you create a modulating or wavering effect.

TIME: Specifies the delay time.

DEPTH: Adjusts the delay depth and the amount of feedback.

TAPE ECHO

This effect models a tape echo unit with three playback heads, including the distortion and tonal changes typical of magnetic tape.

TIME: Specifies the delay time.

DEPTH: Adjusts the delay depth and the amount of feedback.

ROOM REVERB

This simulates the reverberation and ambience of a room.

TIME: Adjusts the reverberation time.

LEVEL: Adjusts the level of reverberation.

CHAMBER REVERB

This simulates the reverberation of an echo chamber.

TIME: Adjusts the reverberation time.

LEVEL: Adjusts the level of reverberation.

HALL REVERB

This simulates the reverberation of a large hall or stadium.


TIME: Adjusts the reverberation time.

LEVEL: Adjusts the level of reverberation.

Set List Screen

The Set List provides away for you to organize all of your favorite programs and songs into a single list providing easy access so that you can select them quickly during performance.

For details on how to register programs and songs in a list, refer to page 27 "Using the Set List Feature."

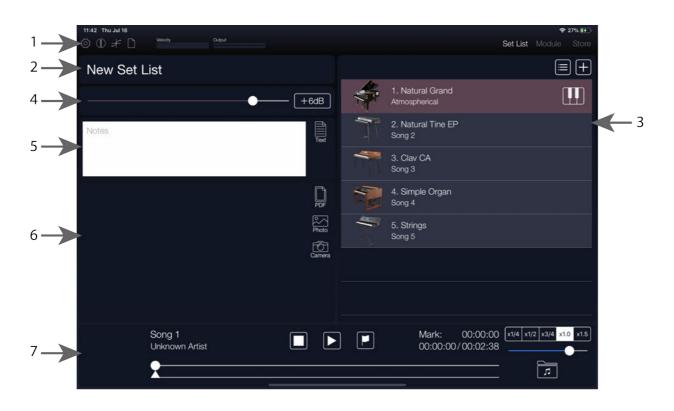


1. Header

These are the items that appear in the header bar:



(Settings): Here you can control settings such as Bluetooth MIDI, Stereo/Mono operation, etc.

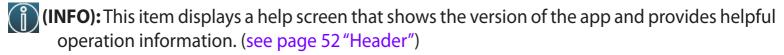

(File Menu): Opens the File Menu.

New: Creates a new set list.

Open: Opens a saved set list.

Save: Overwrites the currently open set list.

Save as...: Saves the currently open set list under a different name.

Velocity: This bar-graph meter displays the velocity values as you perform.

Output: This stereo meter displays the volume while you perform.

Module: Tapping this item will open the Module Screen. (see page 52 "Module")

Store: Tap on this item to enter a screen where you can purchase additional sound engines for the Korg Module.

Note: In order to view the screen for purchasing additional sound engines, you must be able to connect to the Internet.

2. Set list name

This shows the name of the set list. You can tap this to edit the name.



3. List

List

The list shows all the songs and programs registered or assigned to the list.

(EDIT) button


Use the Edit button to change the order of the list or delete items from the list.

(Add) button

Use the Add button to add a program or song to the list.

(Program) button

Use the Program button to open the Program Browser and to register or assign a program to the list.

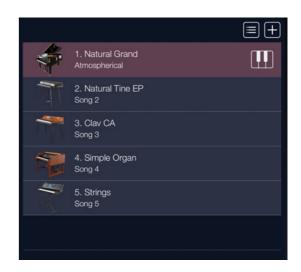

4. Program Level

Adjusts the volume of the registered program.



Level slider

Adjusts the volume of the entire program.

+6dB button

Tap this to increase the volume by 6 dB.

5. Text

Here you can enter comments or performance notes for each item on the list.



See page 36 "Adding Notes or Comments."

6. Score viewer

Here you can display PDFs or image data such as musical scores that are saved on your iPad/iPhone. Tap the PDF or image data to expand it to full-screen.



See page 38 "Using the Score Viewer."



(PDF) button

Displays the PDFs that are saved on your iPad/iPhone. Tap this to see a list of the saved PDFs.



(Photo) button


Displays the image data that is saved on your iPad/iPhone. Tap this to see the file names and thumbnails of the saved image data.



(Camera) button

Displays photos that you took using the camera of your iPad/iPhone. Tap this to start the camera; the image data captured by camera is shown in the screen.

7. Music player

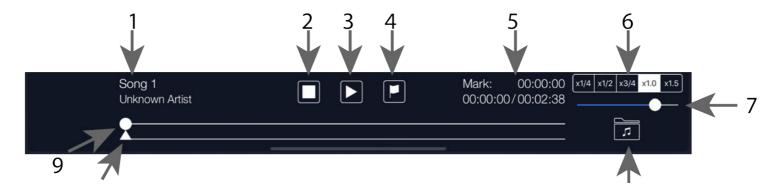

1. Song name

Shows the name of the currently selected song.

2. (stop) butt

Stops song playback.

3. play) button

Plays the song.

4. (mark) button

Moves to the location specified by the mark slider.

5. Digital Counter

Mark: The top number shows the current Mark location.

Elapsed Time: These left-hand numbers show the current playback location.

Total Time: These right-hand numbers show the total time of the selected song.

6. Playback speed button

Specifies the playback speed of the song.

7. Volume slider

Adjusts the playback volume level of the song.

8. (library) button

Registers a song in the list.

9. Location slider


Indicates the currently-playing location.

10. Mark slider

Specifies the mark location within the song.

Module Performance Expansion


From version 3, a new "Module Perfomance Expansion" is available through the store page. This expansion pack contains split/layer mode, MIDI CC# Learn, a sound library that is optimized for split/layer, and setlist template functionality.

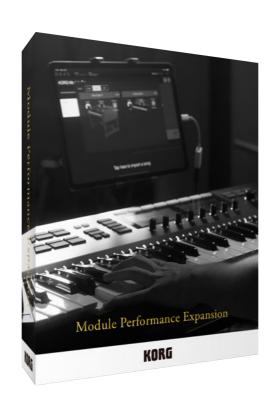


Using Split / Layer

KORG Module supports 2 timbre combination. If you have purchased "Module Performance Expansion", you can use this function via the Set List menu.

Go to Set List and tap the utton on the right-hand side of the screen. You will see three mode buttons: single, layer, and split. Tap the buttons to change the mode.

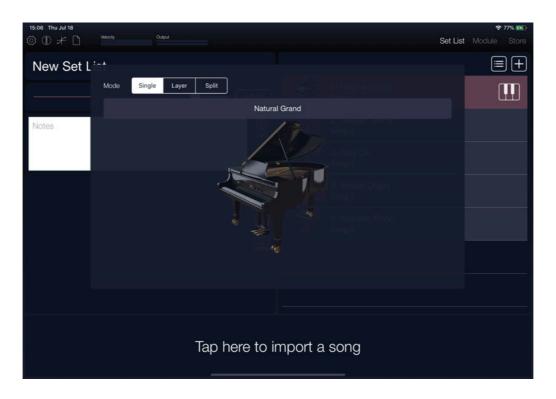

Layer/Split parameters

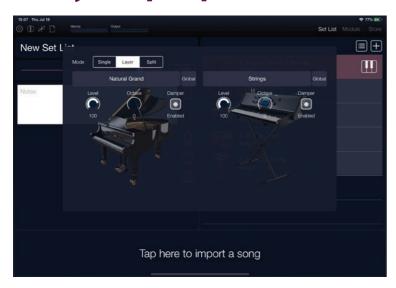

MIDI

Adjusts the MIDI channel for a timbre.

Level

Adjusts the output level of a timbre.

Octave

Adjust the octave offset of a timbre.

Damper

Filter the damper message to a timbre.



Split Point

Adjust the note number that segment the upper/lower sections.

Set via MIDI

Tap this button to configure the Split Point by MIDI note number from your MIDI device.


Using MIDI CC# Learn function

The MIDI CC configuration page is in the settings page. Tap (Settings) to open.



- 1. Tap the parameter you want to control. The status will change to "Send CC to change".
- 2. Send MIDI CC# from your MIDI device.

Tip: To set the default MIDI CC, swipe left on the parameter and tap "Set Default".

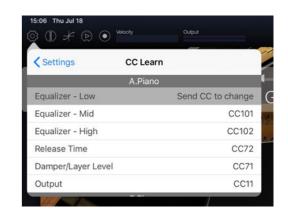

Parameters that can be controlled via MIDI

KORG Module can receive MIDI messages to control the following parameters.

A.Piano

Parameter	CC#
Equalizer - Low	100
Equalizer - Mid	101
Equalizer - High	102
Release Time	72
Damper / Layer Level	71
Output Level	11

E.Piano

Parameter	CC#
KEYOFF NOISE	71
RELEASE TIME	72
HIGH	100
LOW	101
Tremolo	102
TREMOLO - DEPTH	103
TREMOLO - SPEED	104
AMP SWITCH	105
DRIVE	106
OUTPUT LEVEL	11

Organ

Parameter	CC#
ROTATION SLOW/FAST	100
VIBRATO & CHORUS - ON/OFF	101
VIBRATO & CHORUS - V-C	102
OVERDRIVE	103
OUTPUT LEVEL	11

Clav

Parameter	CC#
FILTER - PRESENCE	100
FILTER - TREBLE	101
FILTER - MEDIUM	102
FILTER - BASS	103
PICKUP - C/D	69
PICKUP - A/B	70
KEYOFF NOISE	71
OUTPUT LEVEL	11
MUTE	104

Multi

Parameter	CC#z
Edit 1	100
Edit 2	101
Edit 3	102
Edit 4	103
AMPLIFIER - Attack Time	73
AMPLIFIER - Release Time	72
AMPLIFIER - Output Level	11

Effects

Parameter	CC#
Modulation Effect Parameter 1	12
Modulation Effect Parameter 2	13
Ambience Effect Parameter 1 16	
Ambience Effect Parameter 2	17

CC# = Control change number

Switching programs or songs in a Set List

Programs or songs that are registered in a Set List will switch when a program change message is received.

Damper pedal operation

When a damper pedal (CC#64) message is received, the four sound engines other than organ will switch their damper on/off setting.

For the organ sound engine, the damper on/off setting will switch if the header (settings) Organ Pedal is set to Damper. If it is set to Rotary, the rotary speaker slow/fast setting will be toggled.

Operating Requirements

OS	iOS 11 or later
Device	iPad Air / iPhone 5s or later (64bit device required). * To enjoy the best experience, we recommend using the
Devices and approximate polyphony	iPad Pro: 112 voices iPad Air, iPad Air 2, iPad mini: 72 voices iPad Air 1, iPad mini 3, iPad mini 2: 64 voices iPhone Xs, iPhone X, iPhone 8, iPhone 8 Plus: 112 voices iPhone7, iPhone 7 Plus, iPhone 6s, iPhone 6s Plus, iPhone SE, iPhone 6, iPhone 6 Plus: 72 voices iPhone 5s, Sixth-generation iPod touch: 64 voices
	* To enjoy the best experience, we recommend using the latest model of iPad/iPhone.* The polyphony will depend on the sounds and on the latency setting.
Required Free space	1.2GB

Specifications (Pro version)

Sound Generator	NATIVE ENGINE
The number of Programs	100
Module	Five types • Acoustic Piano • Electric Piano • Organ • Clav • Multi
Master Effect	Modulation effect Ambience effect Usable simultaneously
MIDI	Play using an external MIDI keyboard Program change The damper pedal can be used to switch the rotary speed Virtual MIDI
Interoperation with KORG Gadget	Usable in Gadget as five types of Gadget

Set List Functionality	Change programs for each song you perform View images or PDF scores Use the internal camera to capture memos, etc. Edit text to create memos Load text files Load and play songs from the library of the Music app Adjust the playback speed of songs
MIDI Player	Load and play Standard MIDI Files
Audio Recording	Upload to SoundCloud Upload to Dropbox Export to Mac/PC via iTunes file sharing
Velocity Curve	Dynamics can be varied by your playing on a MIDI keyboard
Others	Inter-App Audio Audiobus support

Support and Service

If you have questions about this product, please contact the Korg distributor in the country where you purchased it.

Information to Provide When Contacting Us

In order for us to help you, we'll need the following information since product support cannot be provided without it

- Your name
- The name and version of the product (How to check the version)
- The name of the device that you're using
- The version of the operating system
- Your question (provide as much detail as possible)

Before You Contact Us

Before you contact us, check whether this manual or Online FAQ has an answer for your question.

Please be aware that we cannot answer questions about products that are not made by Korg, such as basic operation of your hardware device, or general questions about creating songs or sounds.

KORG INC.

4015-2 Yanokuchi, Inagi-City, Tokyo 206-0812 JAPAN © 2014 KORG INC.